



INFINITY SHOWER NICHE ASSEMBLY GUIDE

Infinity
BATHROOM LINE


NICHES

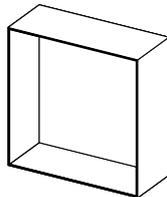

Small Niche
320x320mm

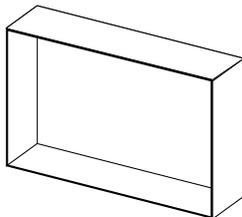

Medium Niche
540x320mm

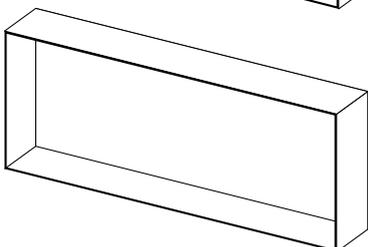

Large Niche
1160x320mm




INFINITY SHOWER NICHE ASSEMBLY GUIDE


These instructions are provided as a helpful guide to assembling your Infinity Shower Niche. Please ensure you pass this copy to your Tiler / Installer to ensure trouble free and correct assembly. The seller will not be held responsible for improper installation or specific jobsite conditions.

1. ASSEMBLY


- a)** Lay the shower niche flat and apply a bead of a solvent free polystyrene friendly construction adhesive such as Sikaflex®-123 MS Bond to the 4 inner edges.

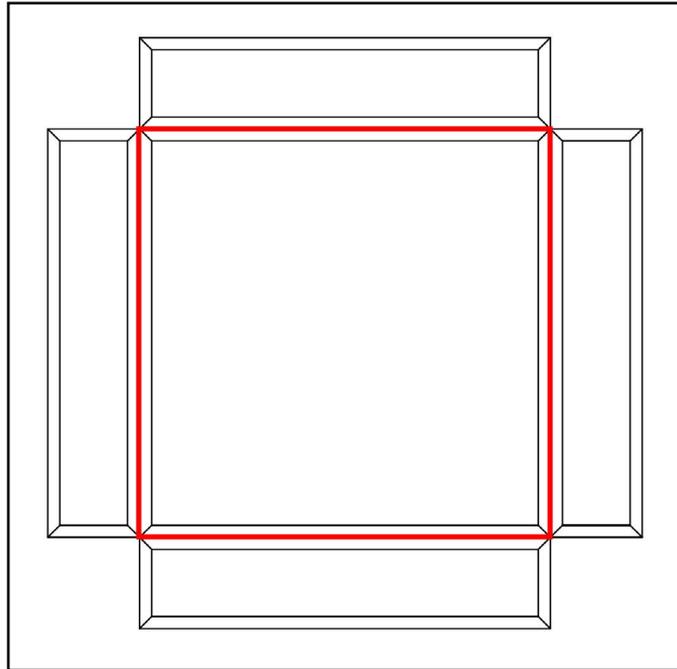

- b)** Fold each of the 4 edges up to create a box and tape the outside of each corner to allow the silicone to cure in place

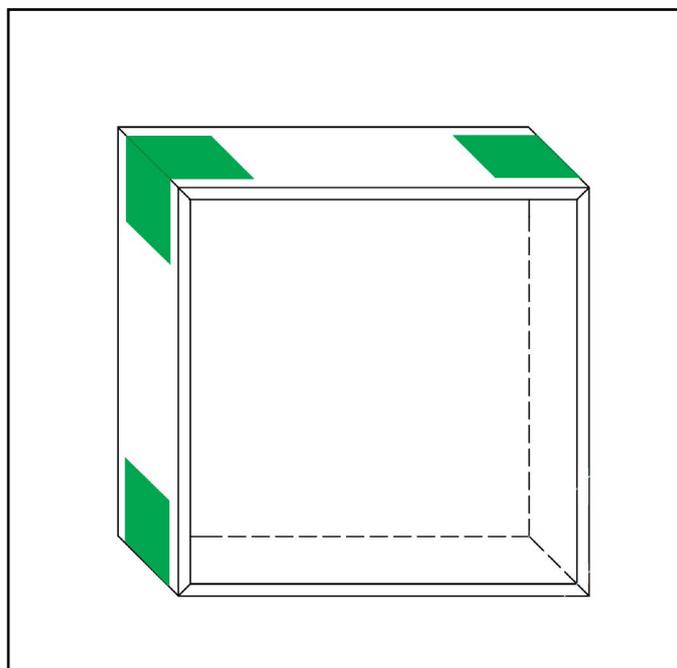

c) Run a bead of construction adhesive (Use a solvent free polystyrene friendly construction adhesive such as Sikaflex®-123 MS Bond). along each of the inside corners and allow to cure.

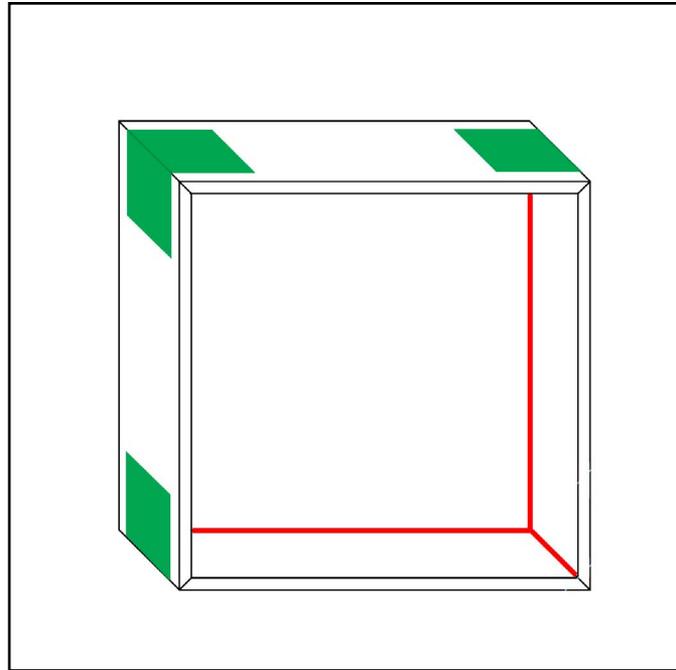

d) Zigzag a bead of construction adhesive (as above) onto the wall framing and then insert the niche into the gap.

e) Run a bead of neutral cure silicone around the outside edges of the niche to create a seal between the niche and the framing.

f) Allow to cure before waterproofing and tiling as per the manufacturers instructions.

