

INFINITY CHANNEL DRAIN INSTALLATION GUIDE

Infinity
BATHROOM LINE



TILE / BRUSHED PLATE
(DOUBLE SIDED)



SLOT




DESIGNER MESH

INFINITY CHANNEL DRAIN INSTALLATION INSTRUCTIONS

These instructions are provided as a helpful guide to installing your Infinity channel drain. Please ensure you pass this copy to your Tiler / Installer to ensure trouble free and correct installation. The seller will not be held responsible for improper installation or specific jobsite conditions.


1. PREPARATION

- a) Check that the fall in the shower tray has been installed as to the correct falls.
- b) Ensure that an appropriate flange has been attached to the waste pipe in the floor. We recommend the Allproof brand.
- c) Ensure that the shower floor and recess for the channel drain have been waterproofed up to and down into the flange

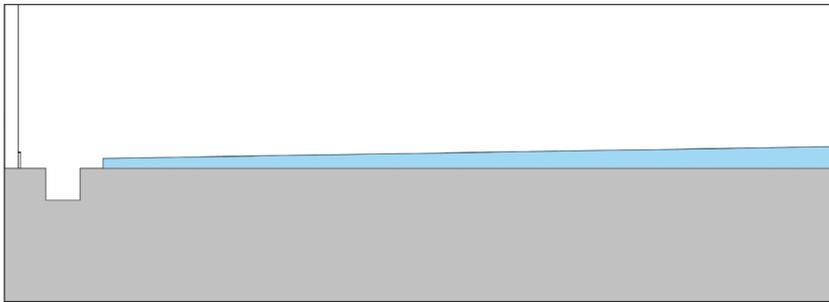


2. Installation


- a) Attach a stainless steel spigot to the waste hole at the bottom of the channel. Create a water-tight seal with a neutral cure silicone and allow to cure.

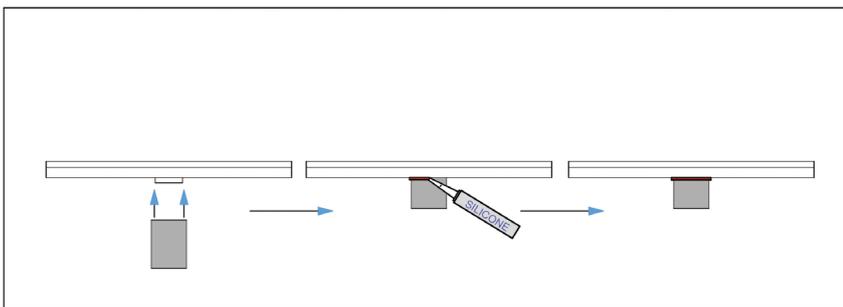


- b) Apply dabs of neutral cure silicone or a solvent free polystyrene friendly construction adhesive such as Sikaflex®-123 MS Bond.

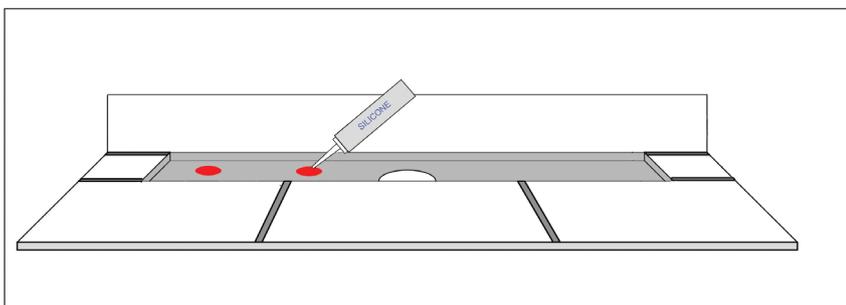

c) Lower the channel insert in onto the dabs of adhesive and leave it to cure before proceeding further.

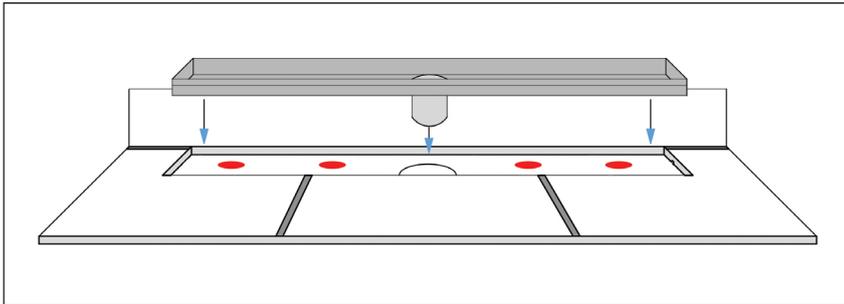



d) Seal around the perimeter between the channel drain and the wall and the channel drain and the shower base (where the tiles meet) with a neutral cure silicone and allow to cure.

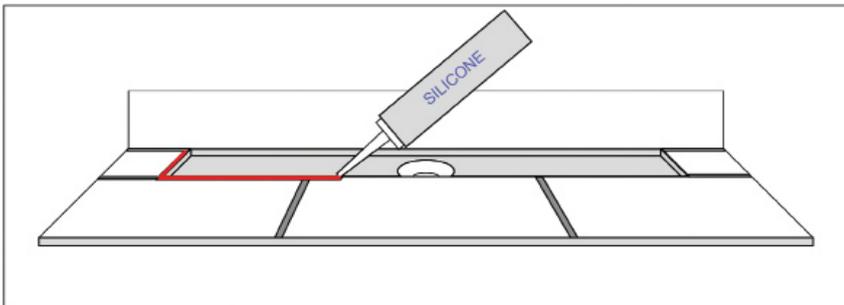


e) Place the grating of the channel into the trough.

3. Inserting tiles for a tile insert drain

a) If it is a tile insert finish, glue tiles into the plate using silicone and allow to cure before grouting the tile joints. When this is cured, seal around the perimeter where the tiles and the plate meet with a neutral cure silicone.

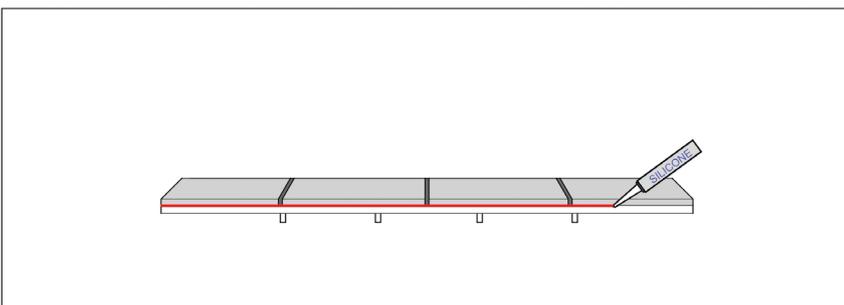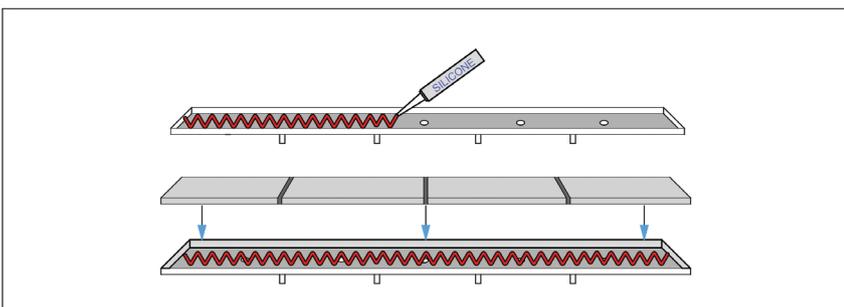

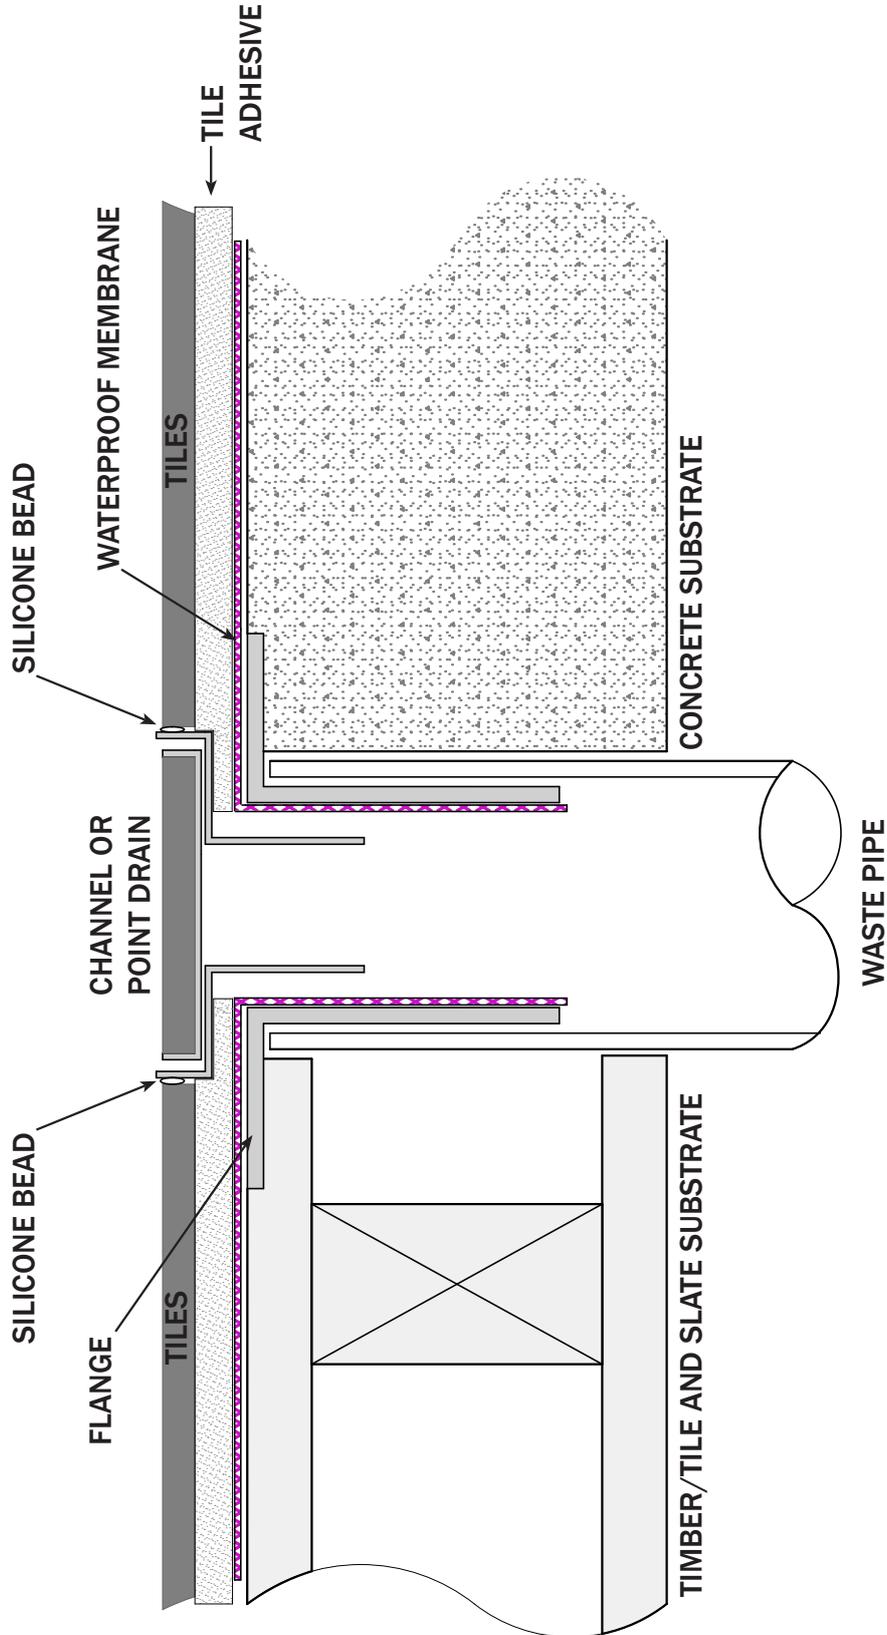

INFINITY BATHROOMWARE
LINEAR AND POINT DRAIN INSTALLATION DIAGRAM

