


CENTRAL SHOWER TRAY HOBBED | TIMBER SUBSTRATE

*Use waterstops as required/specified. Must be installed as per manufacturers instructions.


*Refer to membrane installation guide for specific bond breaker detailing

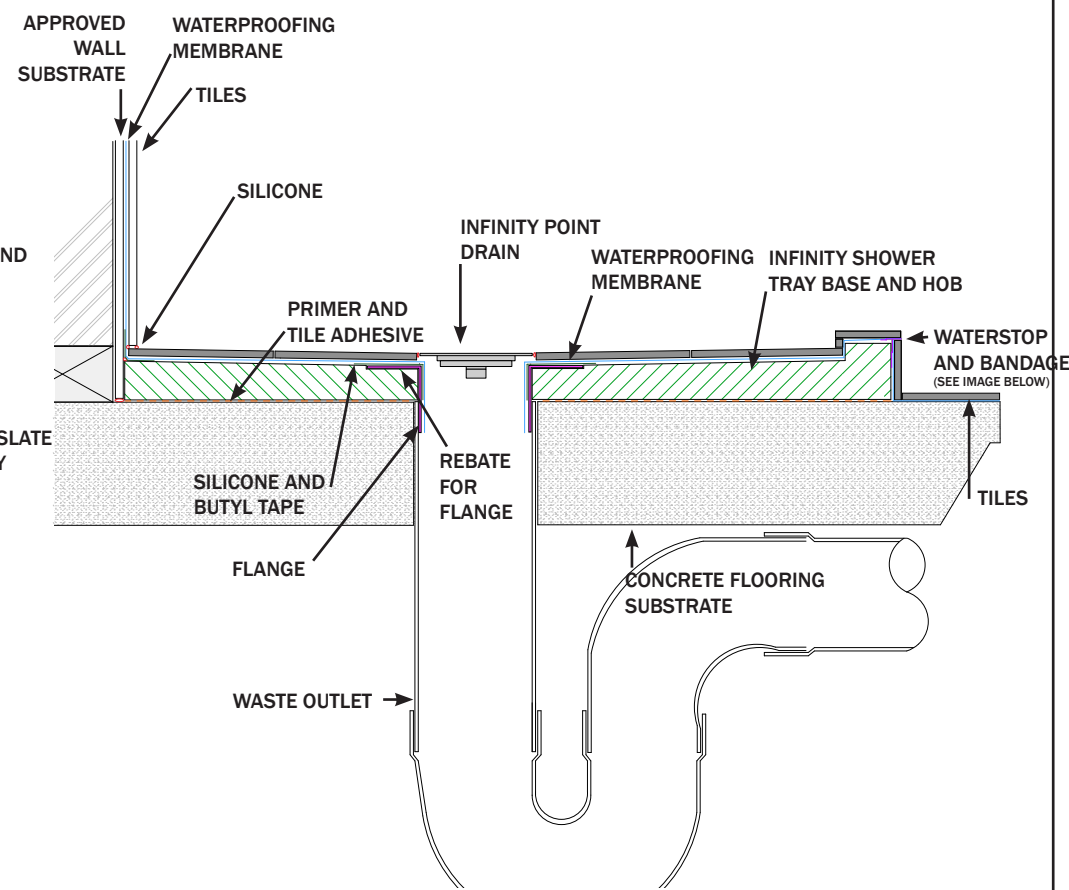

CENTRAL SHOWER TRAY HOBBED | CONCRETE SUBSTRATE

*Use waterstops as required/specified. Must be installed as per manufacturers instructions.

*Refer to membrane installation guide for specific bond breaker detailing

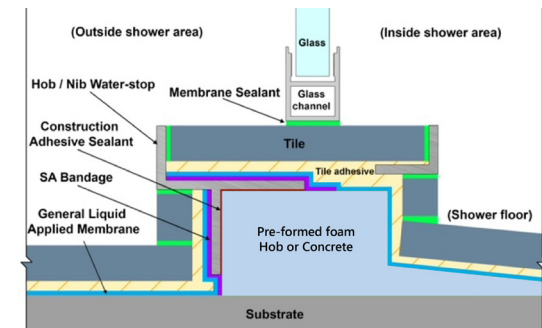

INFINITY BATHROOMWARE
Central Tray Installation Diagram - Hobbed

