



INFINITY FOOT REST INSTALLATION GUIDE

INFINITY FOOT REST GUIDE

These instructions are provided as a helpful guide to installing your Infinity Foot Rest. Please ensure you pass this copy to your Tiler / Installer to ensure trouble free and correct installation. The seller will not be held responsible for improper installation or specific jobsite conditions.


1. INSTALLATION OPTION ONE: UNDER TILE (over wall lining)

- a)** Clean and prepare the surface area to ensure that all contaminants are removed. I.e. paint, dirt, plaster, dust etc.
- b)** Set height of foot rest, and mark outline of the foot rest with a pencil to set gluing area.
- c)** Prime your substrate with a primer like Davco Primex and allow to dry.
- d)** Apply a solvent free polystyrene friendly construction adhesive such as Sikaflex®-123 MS Bond to the foot rest and adhere to the wall.
- e)** Press down firmly to ensure any air pockets are removed.
- f)** Once the adhesive is dry, use a neutral cure silicone to seal around the foot rest edges.
- g)** Waterproof area and tile as normal.


1. INSTALLATION OPTION TWO: OVER TILE

- a)** Clean and prepare the tiled surface area to ensure that all contaminants are removed. I.e. paint, dirt, plaster, dust etc.
- b)** Set height of foot rest, and mark outline of the foot rest with a pencil to set gluing area.
- c)** Key the surface of the tile with a grinder and prime with Gripset OP Primer.
- d)** Apply a solvent free polystyrene friendly construction adhesive such as Sikaflex®-123 MS Bond to the foot rest and adhere to the tiles.
- e)** Press down firmly to ensure any air pockets are removed.
- f)** Once the adhesive is dry, use a neutral cure silicone to seal around the foot rest edges.
- g)** Tile foot rest, and finish corners/edges with silicone (same as being used with the tiles).


Fits into corner of wall – 45° Angle

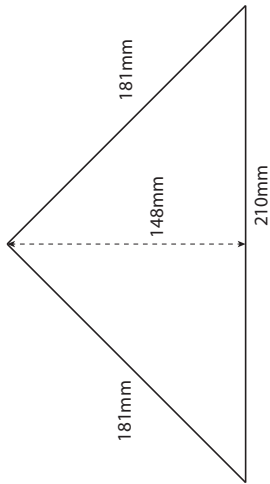


B-MIDDLE SECTION TOP VIEW

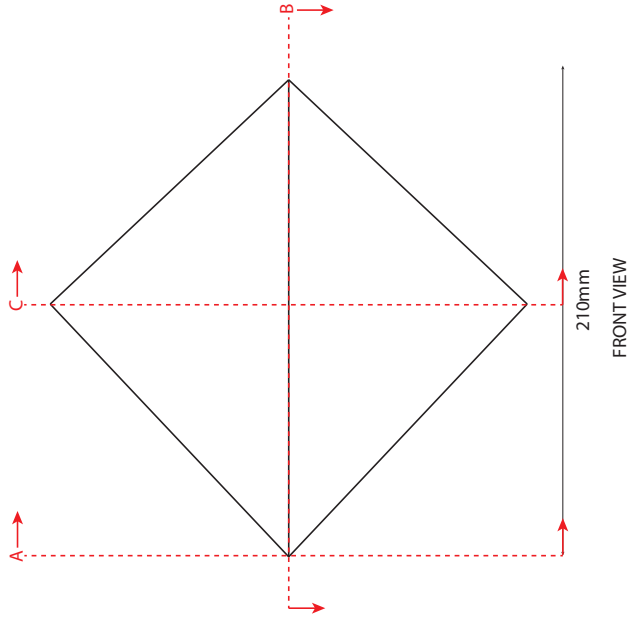

FRONT VIEW

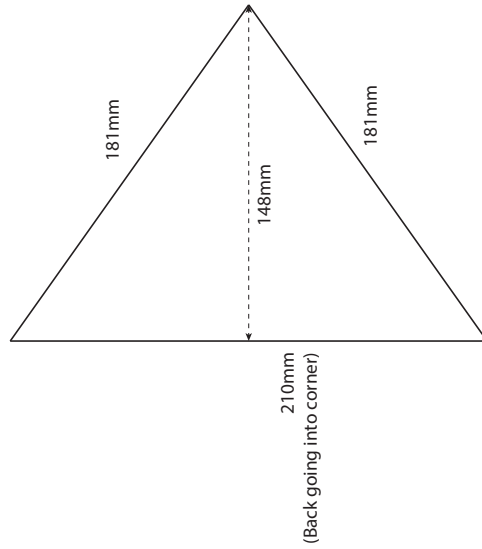

A - SIDE VIEW

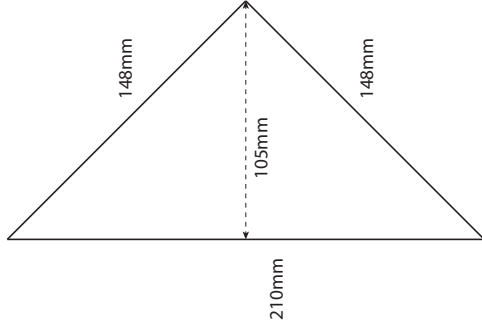

C-MIDDLE SECTION SIDE VIEW



INFINITY BATHROOMWARE
FOOT REST TECHNICAL DRAWINGS

