


SLOPED SHOWER TRAY WITH EXTENDER HOBBED | TIMBER SUBSTRATE

*Use waterstops as required/specified. Must be installed as per manufacturers instructions.

*Refer to membrane installation guide for specific bond breaker detailing

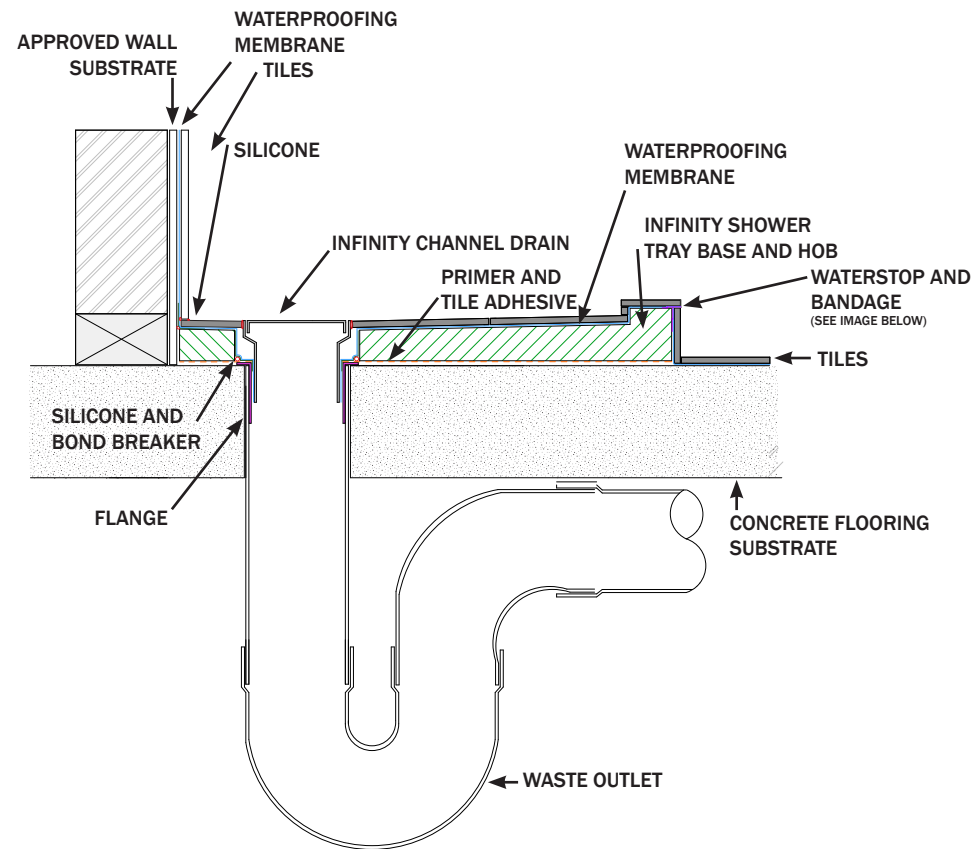

SLOPED SHOWER TRAY WITH EXTENDER HOBBED | CONCRETE SUBSTRATE

*Use waterstops as required/specified. Must be installed as per manufacturers instructions.

*Refer to membrane installation guide for specific bond breaker detailing

