


### SLOPED SHOWER TRAY WITH EXTENDER RECESSED | TIMBER SUBSTRATE

\*Use waterstops as required/specified. Must be installed as per manufacturers instructions.


\*Refer to membrane installation guide for specific bond breaker detailing

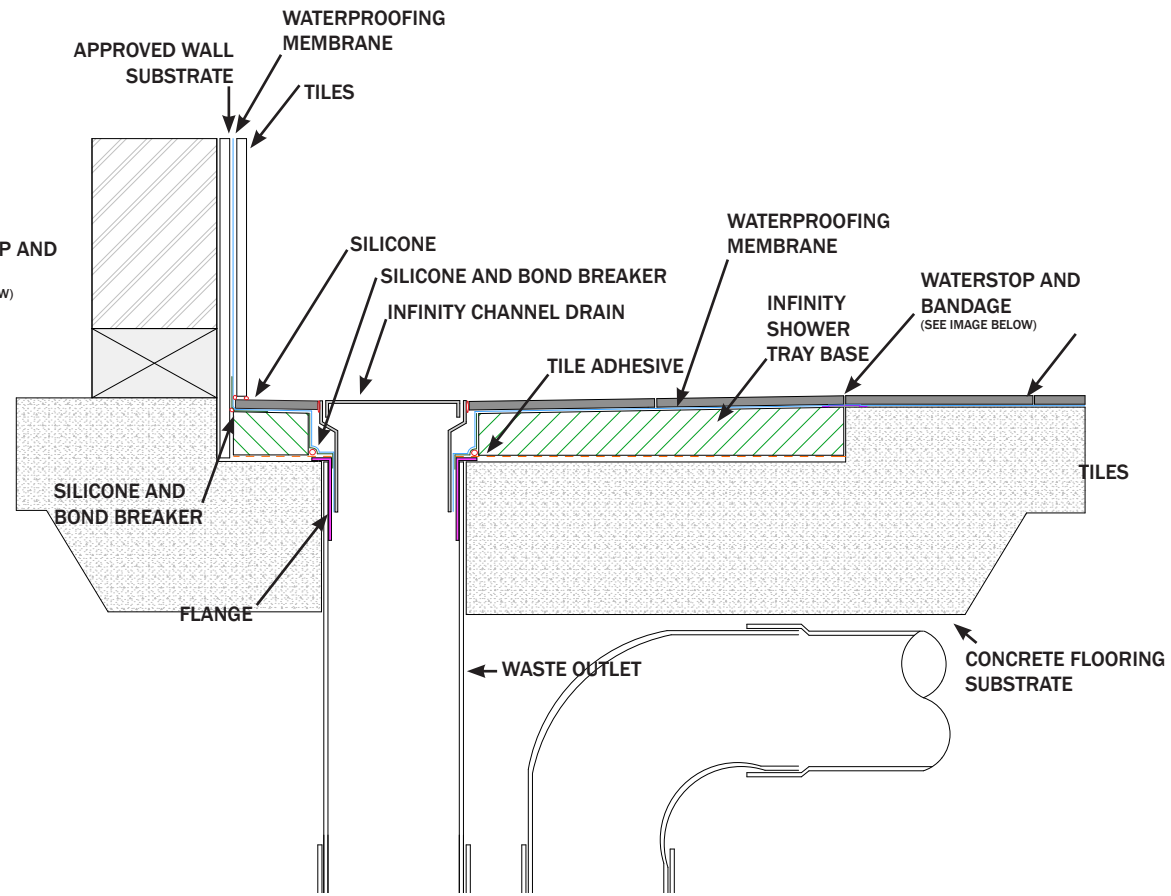

### SLOPED SHOWER TRAY WITH EXTENDER RECESSED | CONCRETE SUBSTRATE

\*Use waterstops as required/specified. Must be installed as per manufacturers instructions.

\*Refer to membrane installation guide for specific bond breaker detailing

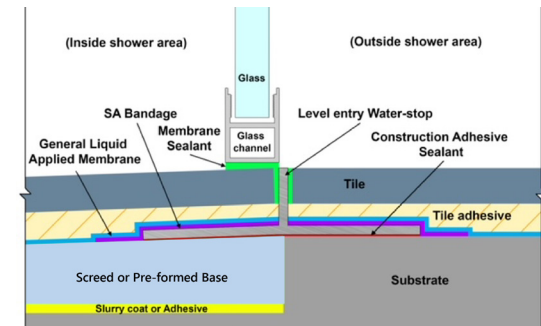

**INFINITY BATHROOMWARE**  
Sloped Tray with Extender Installation Diagram - Recessed

