


SLOPED SHOWER TRAY WITH HOB | TIMBER SUBSTRATE

*Use waterstops as required/specified. Must be installed as per manufacturers instructions.


*Refer to membrane installation guide for specific bond breaker detailing

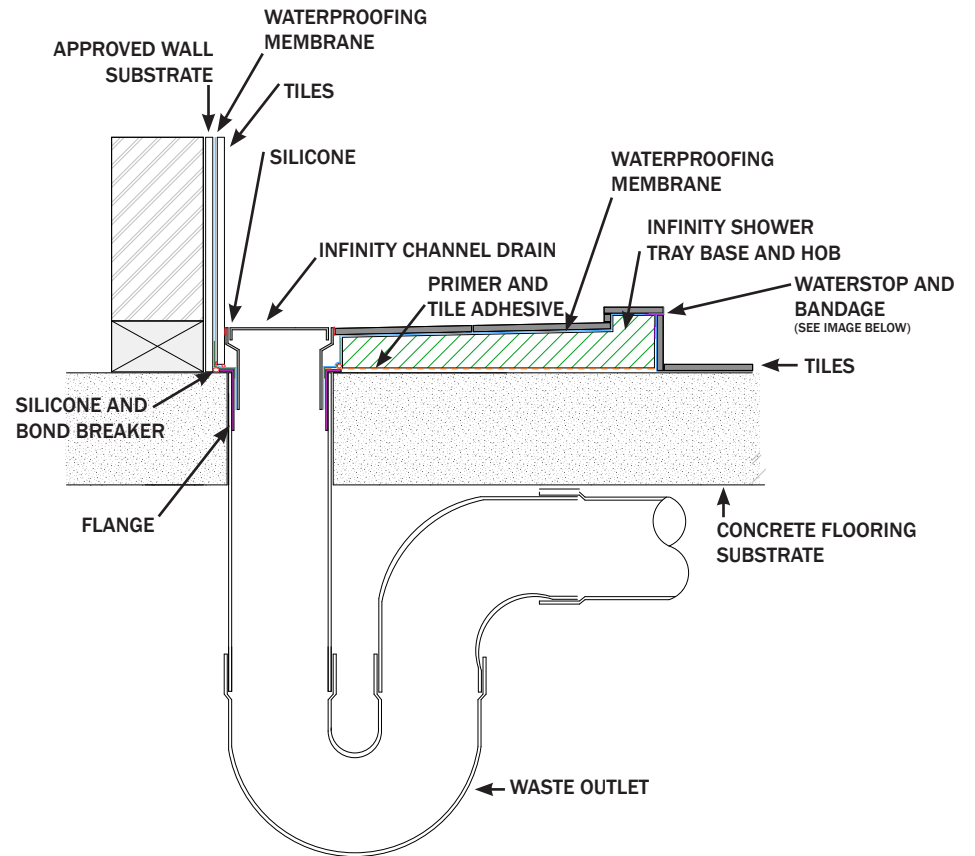

SLOPED SHOWER TRAY WITH HOB | CONCRETE SUBSTRATE

*Use waterstops as required/specified. Must be installed as per manufacturers instructions.

*Refer to membrane installation guide for specific bond breaker detailing

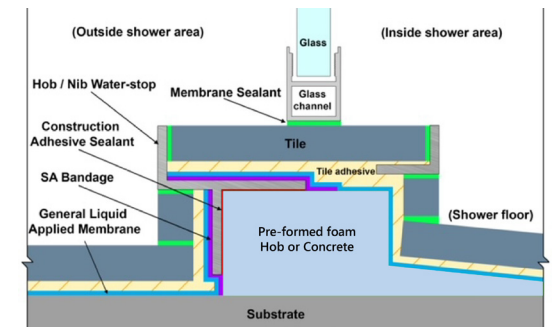

INFINITY BATHROOMWARE
Sloped Tray Installation Diagram - with Hob

