


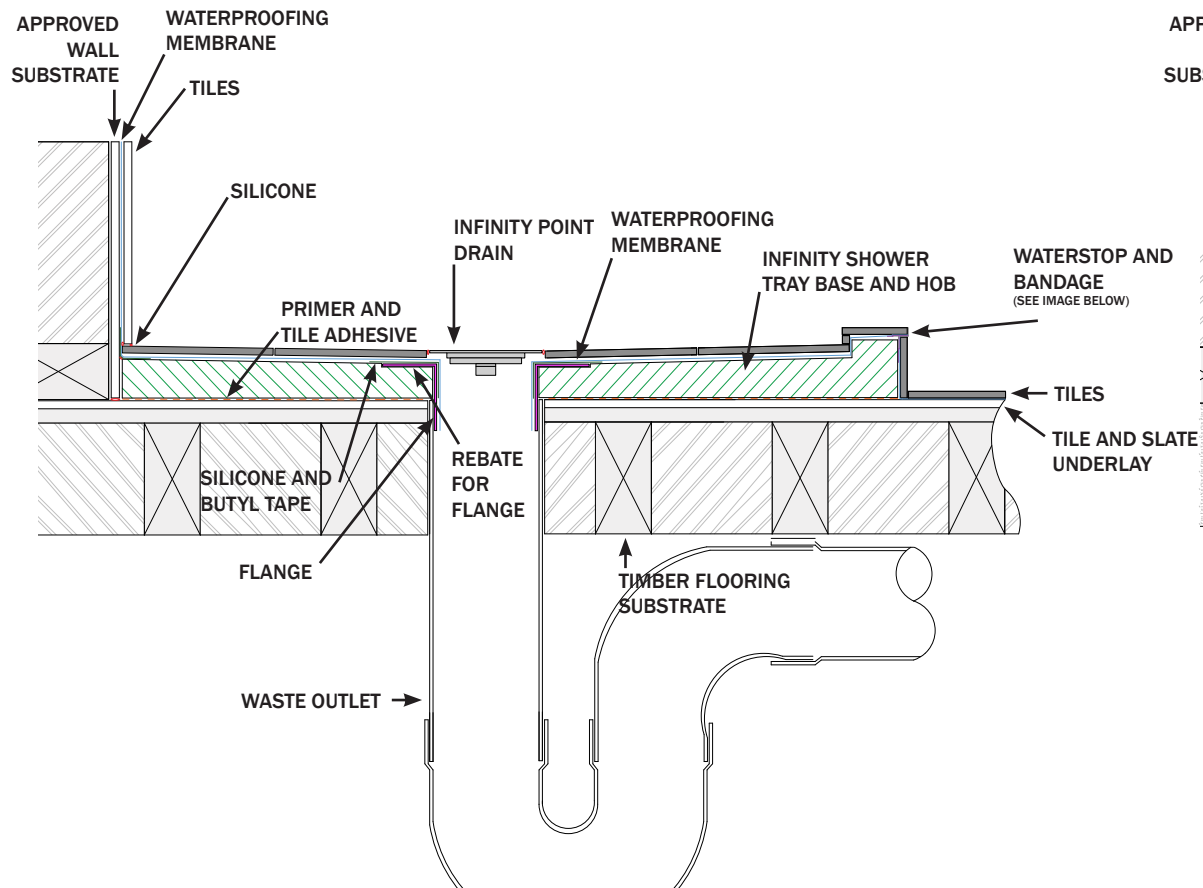


CENTRAL SHOWER TRAY HOBBED | TIMBER SUBSTRATE

*Use waterstops as required/specified. Must be installed as per manufacturers instructions.

*Refer to membrane installation guide for specific bond breaker detailing

* Install with the ART Art Bermuda Puddle Flange 100mm in pipe - ART32215

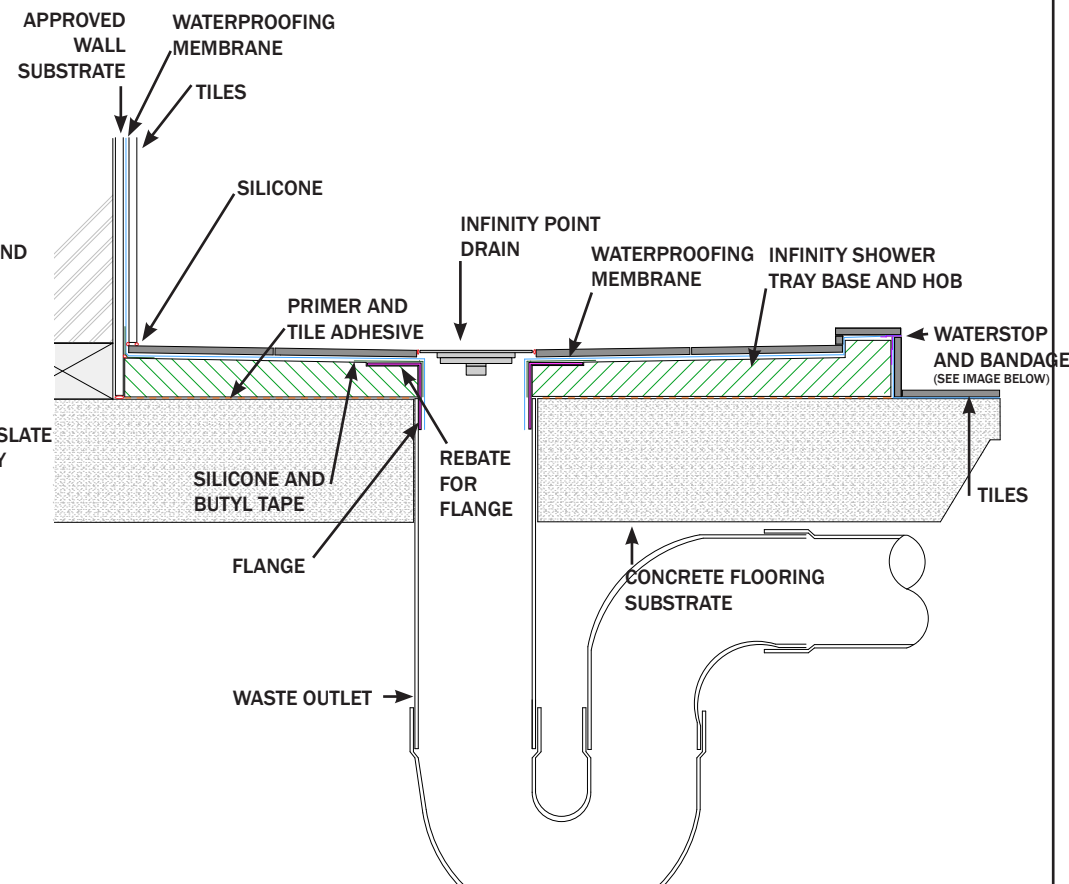


CENTRAL SHOWER TRAY HOBBED | CONCRETE SUBSTRATE

*Use waterstops as required/specified. Must be installed as per manufacturers instructions.

*Refer to membrane installation guide for specific bond breaker detailing

* Install with the ART Art Bermuda Puddle Flange 100mm in pipe - ART32215

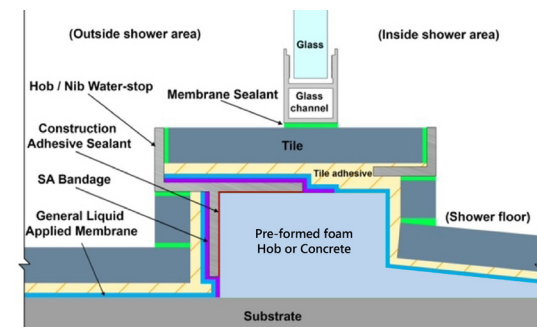

Infinity
BATHROOM LINE

INFINITY BATHROOMWARE
Central Tray Installation Diagram - Hobbed

