


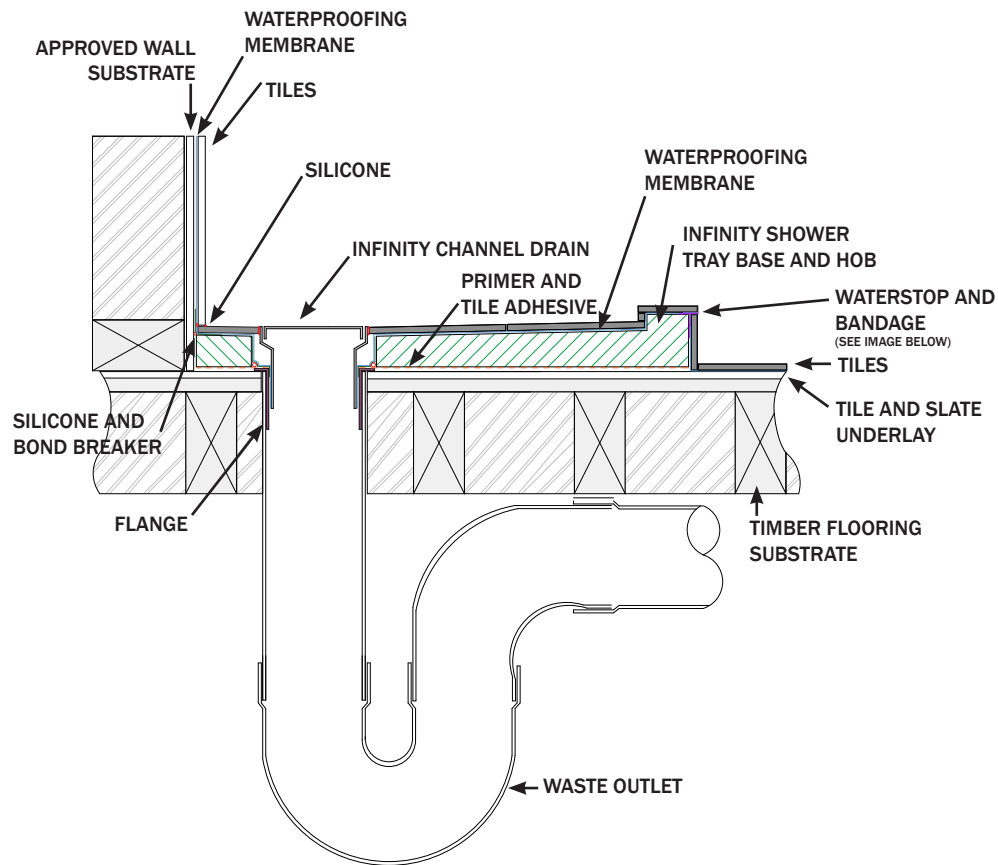


### SLOPED SHOWER TRAY WITH EXTENDER HOBBED | TIMBER SUBSTRATE

\*Use waterstops as required/specified. Must be installed as per manufacturers instructions.

\*Refer to membrane installation guide for specific bond breaker detailing

\*Install with a VF90 Style Floor Flange

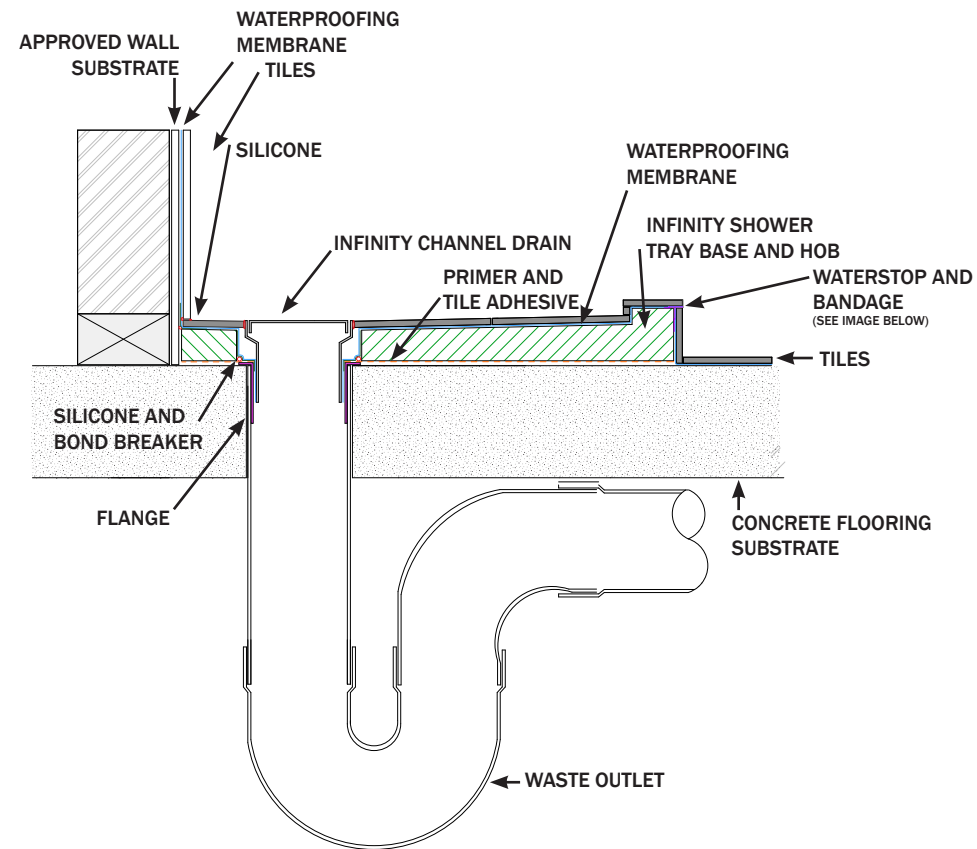


### SLOPED SHOWER TRAY WITH EXTENDER HOBBED | CONCRETE SUBSTRATE

\*Use waterstops as required/specified. Must be installed as per manufacturers instructions.

\*Refer to membrane installation guide for specific bond breaker detailing

\*Install with a VF90 Style Floor Flange

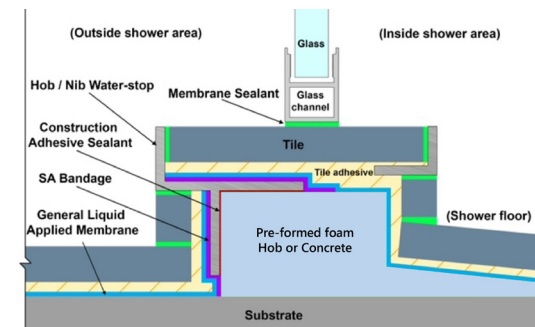

**Infinity**  
BATHROOM LINE

**INFINITY BATHROOMWARE**  
Sloped Tray with Extender Installation Diagram - with Hob

