


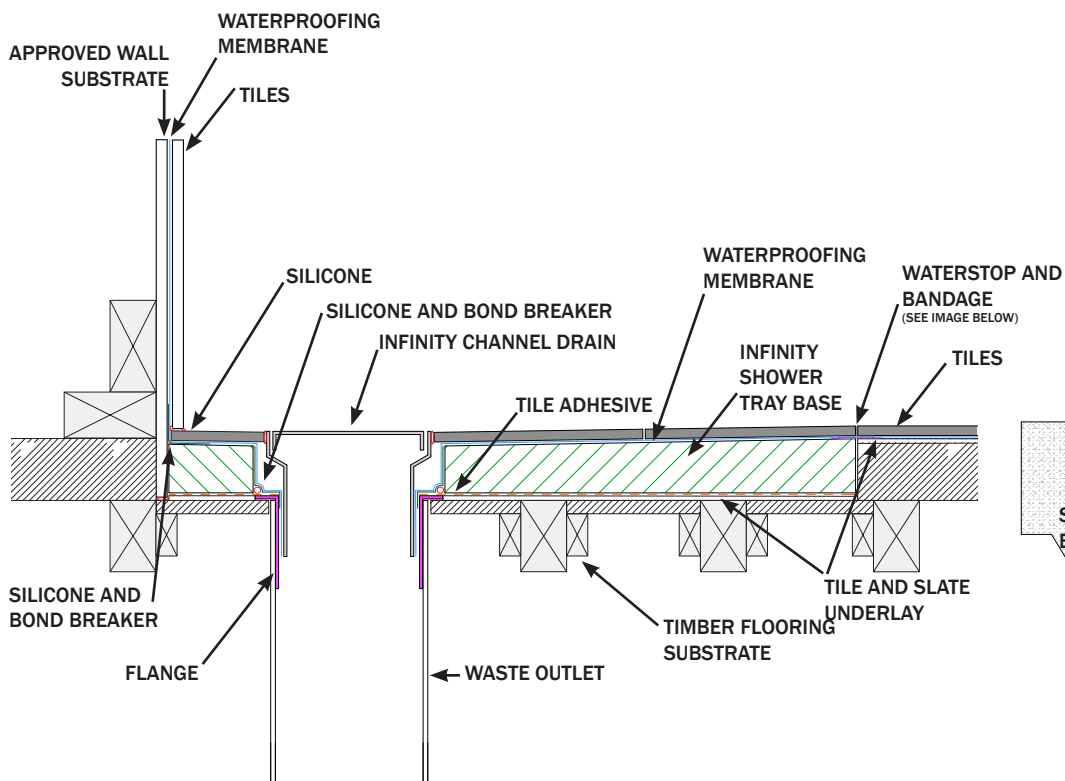


SLOPED SHOWER TRAY WITH EXTENDER RECESSED | TIMBER SUBSTRATE

*Use waterstops as required/specified. Must be installed as per manufacturers instructions.

*Refer to membrane installation guide for specific bond breaker detailing

*Install with a VF90 Style Floor Flange

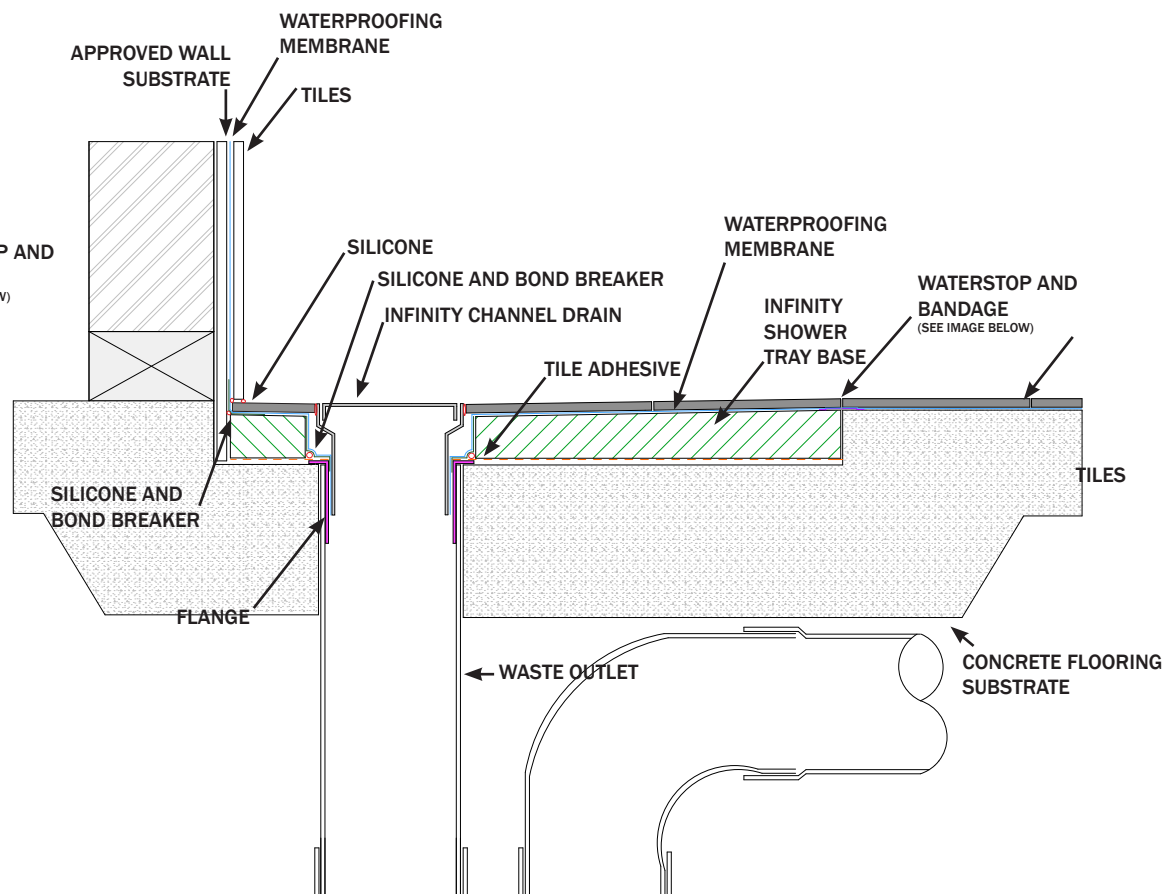


SLOPED SHOWER TRAY WITH EXTENDER RECESSED | CONCRETE SUBSTRATE

*Use waterstops as required/specified. Must be installed as per manufacturers instructions.

*Refer to membrane installation guide for specific bond breaker detailing

*Install with a VF90 Style Floor Flange

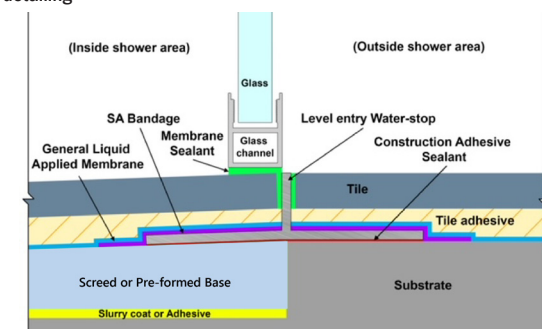

Infinity
BATHROOM LINE

INFINITY BATHROOMWARE
Sloped Tray with Extender Installation Diagram - Recessed

